

User Manual

WARNING: Read the instructions before using the machine.



Model No. N1926F

Dispenser formaggio fuso

FUSO® - 2023 GE. VI. TRADE ITALIA SRL

INDEX

1 Security	3
1.1 General Warnings	3
1.2 Safe installation	3
1.3 Safe use	4
1.4 Damaged appliance	4
2 Installation	4
2.1 Equipment	4
2.2 Installation	5
2.3 Setup.....	5
3 Cleaning and Maintenance	6
4 Circuit diagram	7
5 Spare parts list	8





Please observe the following safety instructions.

1.1 General Warnings

- Read these instructions carefully.
- Keep the instructions and product information for later use or for the future owner.
- Do not connect the device if it has been damaged during transport.

1.2 Safe Installation

WARNING - Danger of injury !

Incorrect installation can cause injury.

- Follow the instructions in the operating manual and assembly instructions when installing and connecting the appliance.

WARNING - Danger of electric shock !

Installations carried out improperly constitute a hazard.

- Only connect and use the device in accordance with the data on the rating plate.
- Always use the supplied connection cable of the new device.
- Only connect the appliance to an AC mains with a properly installed earthed socket.
- The protective conductor system of the electrical installation must be installed in accordance with standards.
- Never power the device from an external switch e.g. an external timer or remote control.
- When installing the unit, take care that the power cable does not get caught and damaged.

WARNING - Fire Hazard !

It is dangerous to use a power cable with an extension cord and an unsuitable adapter.

- Do not use extension cables or multiple sockets.
- Only use adapters and power cables approved by the manufacturer.
- Ensure that there is a minimum distance of 5 cm between the appliance and the installation ducts.

Contact between the appliance and installation ducts can lead to defects in installation ducts, e.g. gas pipes and power lines. Gas leaking from a corroded gas pipe can ignite. A damaged power line can cause a short circuit.



⚠ WARNING - Danger of tipping over!

Incorrect installation can cause the unit to tip over.

1.3 Safe use

⚠ WARNING - Danger of burns!

The appliance in use generates heat, the inclined metal inner shelf can become very hot, avoid touching it with bare hands if the appliance is in use. Switch off the appliance and let it cool down to avoid burns.

This symbol  means: WARNING - hot surfaces!

1.4 Damaged device

⚠ WARNING - Danger of electric shock!

A damaged appliance or power cable poses a danger

- Never operate a damaged appliance.
- Never use an appliance with a damaged surface.
- Never pull the mains cable to disconnect the appliance from the mains. Always unplug the power cable.
- If the appliance or the power cable is damaged, unplug the power cable immediately.
- Please contact customer service.

Improperly performed repair work is a source of danger.

Installation

EN

For proper functioning, the device must be connected correctly.

Observe the required criteria and assembly instructions.

1.1 Equipment

After unpacking, check all components for transport damage. If you have any complaints, please contact the dealer where you purchased the device or our customer service department.

Keep the original packaging for re-use when returning the equipment or for a possible repair shipment, to avoid damage during transport.



The equipment includes:

- **Melted cheese dispenser**
- **Additional bag drawer**
- **Inclined metal shelf**
- **Instruction manual**
- **Power cable**

1.2 Installation

- Remove the packaging material and store it carefully
- Place the device on a level surface away from heat sources
- Connect the power cable first to the machine and then into the socket
- Set the switch on the back of the unit to the ON position
- Ensure that the front door is closed

1.3 Setup


The appliance will be factory preset to an operating temperature of between 55 and 60° Celsius; the temperature may only be adjusted by qualified personnel.

The temperature of the inner chamber will be shown in the front display, the appliance will take approx. 60 minutes to reach the set temperature.

Dispensing can be done with three different buttons:

- Button 1 - Small dispensing, dispensing is timed and preset for a duration of 4 seconds.
- Button 2 - Manual dispensing, the operator can decide how much product to dispense.
- Button 3 - Large dispensing, dispensing is timed and preset for a duration of 8 seconds.



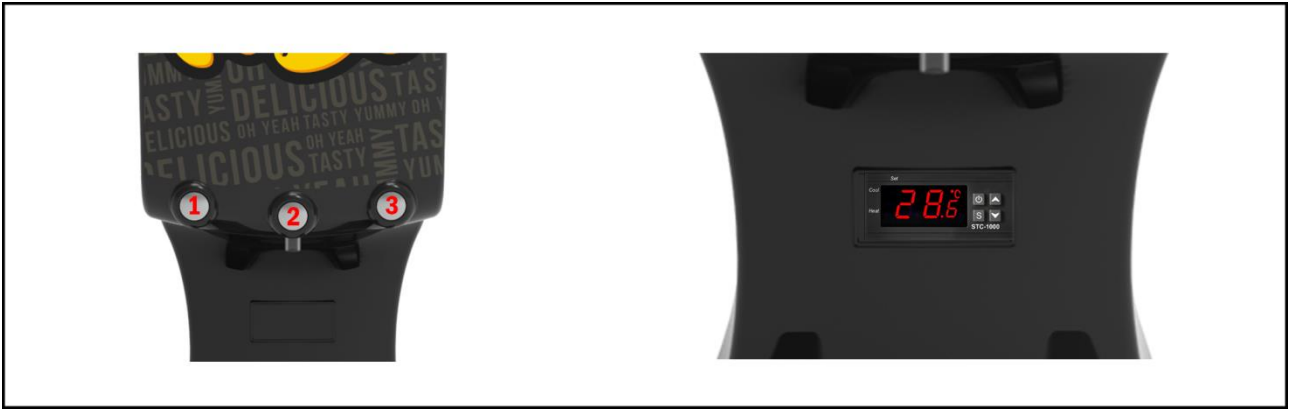

Front luminaire image

Open the front compartment insert the cheese bag with the silicone tube adapter on the inclined shelf, turn the knob to the left to open the peristaltic pump, insert the silicone tube into the peristaltic pump and turn the knob to the right to close the pump.

If necessary, place a spare bag of cheese in the top drawer so that it is always available.



Cleaning and maintenance

EN

Observe the following guidelines to maintain the good condition of the equipment

- Deposits on the outside, such as food residues, can cause damage to the appliance. To avoid malfunctions and reduce the build-up of deposits, we recommend cleaning the appliance at regular intervals.
- Clean the adapter and the silicone tube that comes with the cheese bag after each use.
- Do not use aggressive detergents to clean the equipment, use a damp cloth. The appliance must not be cleaned with a water jet.
- Cleaning and maintenance by the user must not be carried out by children.

WARNING - Danger of electric shock !


- Disconnect the equipment from the power supply before carrying out any cleaning operations. Do not use excessive water as this could come into contact with the electrical part and generate a short circuit, use a damp cloth.

General Warnings




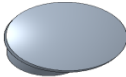
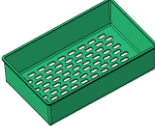
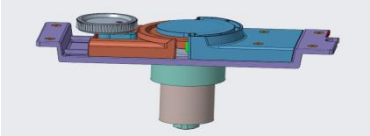
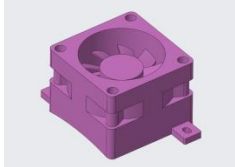
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been supervised or instructed in its use by a person responsible for their safety.
- Children must be supervised to ensure that they do not play with the device.
- These devices are intended for use in commercial applications, e.g. in the kitchens of restaurants, canteens, hospitals and in commercial enterprises such as bakeries, butcher shops, etc., but not for food production.
- This appliance may be used by children aged 8 years and older and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised or instructed in the safe use of the appliance and understand the dangers involved.
- Children must not play with the device.



Electrical diagram

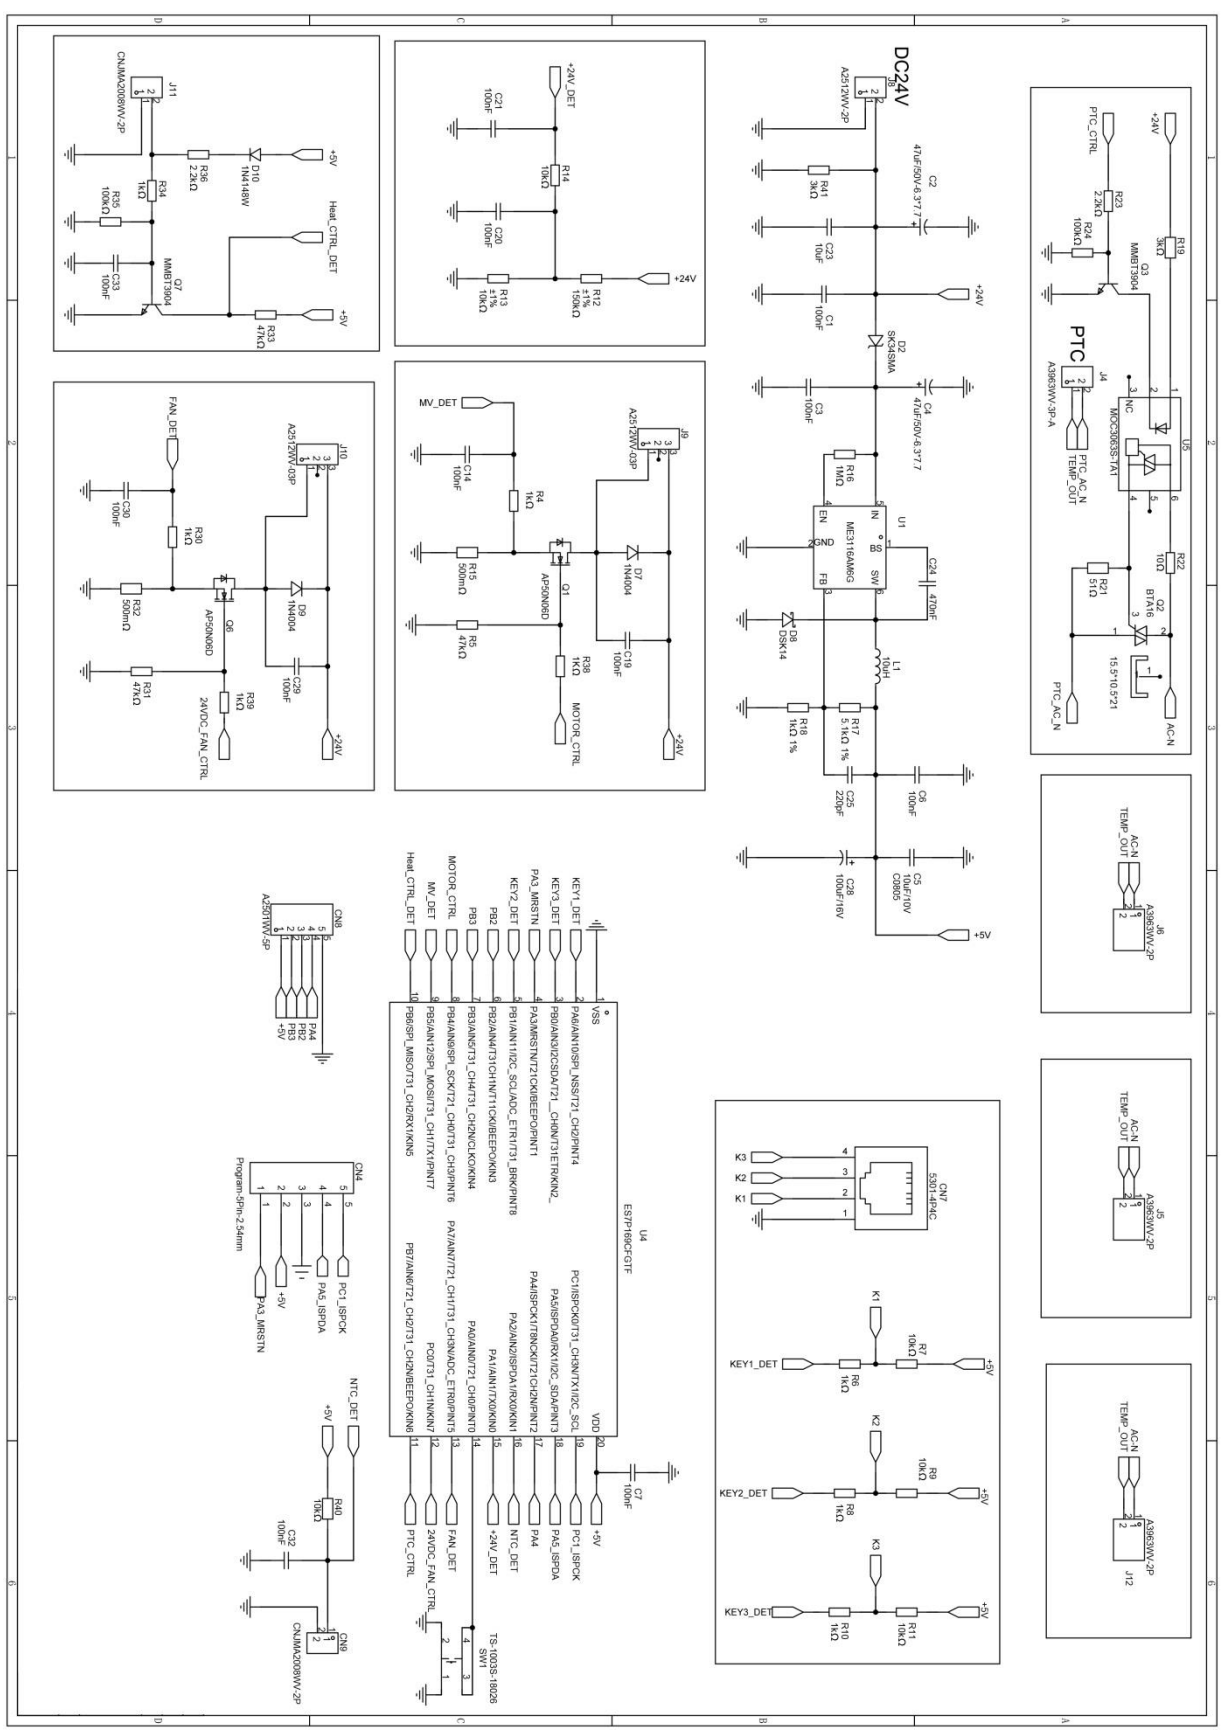

Spare parts list

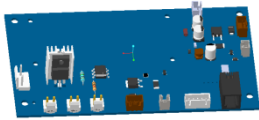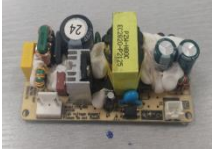Part Number	Description	Image
22430-024	Main PCBA Main Board	
22430-005	Transformed Power PCBA	
22430-004	Temperature controller with STC thermostat	
22430-008	Button Button	
HK2430005	Storage basket tray	
2430-005	Peristaltic pump unit Pump unit	
102430-008	PTC unit PTC unit	



Model No. N1926F

Melted cheese dispenser

FUSO® - 2023 GE. VI. TRADE ITALIA SRL